

Autoprop 2002

ATTERRAGGIO - LANDING



Deviatore Auto – **su Auto**
Led Auto – **Acceso**
Auto Switch – **on Auto**
Auto Led - **On**



Deviatore Cruise T/O Ldg su :
T/O-Ldg
Cruise T/O Ldg Switch on :
T/O-Ldg

FUNZIONAMENTO MANUALE MANUAL WORKING



Deviatore Auto - **off**
Led Auto - **spento**
Auto Switch - **off**
Auto Led - **off**



Aumentare o Diminuire i giri
Increase or Decrease RPM



Manuale di utilizzo
Working manual

PRIMA DELLA MESSA IN MOTO BEFORE START ENGINE




Deviatore Cruise T/O Ldg su :
T/O-Ldg
Cruise T/O Ldg Switch on :
T/O-Ldg



Deviatore Auto - **off**
Led Auto - **spento**
Auto Switch - **off**
Auto Led - **off**


DOPO LA MESSA IN MOTO AFTER START ENGINE

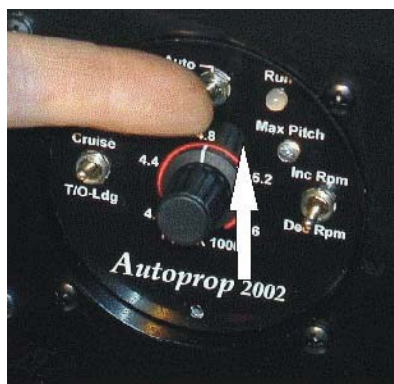


Deviatore Auto – su Auto
Led Auto – **Acceso**

Auto Switch – **on Auto**
Auto Led - **On**

DECOLLO - TAKE OFF

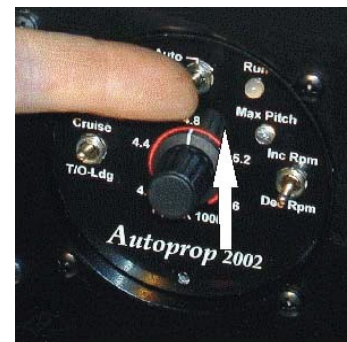

Deviatore Auto – **su Auto**
Led Auto – **Acceso**
Auto Switch – **on Auto**
Auto Led - **On**

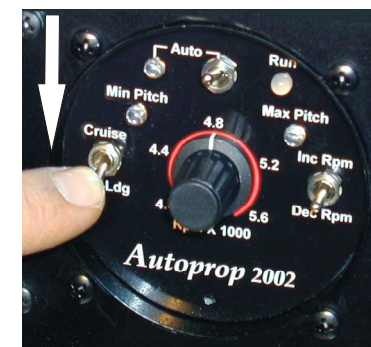

Deviatore Cruise T/O Ldg su :
T/O-Ldg
Cruise T/O Ldg Switch on :
T/O-Ldg

VOLO IN CROCIERA - CRUISE FLIGHT



Deviatore Cruise T/O Ldg su :
CRUISE
Cruise T/O Ldg Switch on :
CRUISE



Impostare i giri per la crociera
Set Cruise RPM